


Transmitter (PN-T19-2)

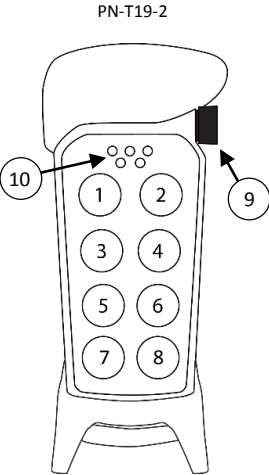

Btn.	Step	Function	Relay
1	1	Down	1
	2	Down + high speed	1+3
2	1	Up	2
	2	Up + high speed	2+3
3	1	Left	6
	2	Left + high speed	6+8
4	1	Right	7
	2	Right + high speed	7+8
5	1	Forward	9
	2	Forward + high speed	9+11
6	1	Backward	10
	2	Backward + high speed	10+11
7	1	Start Left button	4
	2		4
8	1	Start Right button	-
	2		-
9	Stop button/stop function		-
10	LED Indicators		-



Thank you for purchasing a Tele Radio AB product!



Quick installation/startup guide for  
PNS-R1521-T1921 Standard system

**Content:**

Receiver (PNS-R1521) - Overview .....	2
Receiver (PNS-R1521) - Outgoing cable .....	3
Transmitter (PN-T19-2) .....	4


Start transmitter		
1.	Make sure that the stop button is pressed.	
2.	Twist and pull out the stop button.	The top LED lights (green when the battery capacity is good, red when the battery capacity is poor), LEDs 3 and 4 flash (red).
3.	Press buttons 7 and 8 at the same time for at least 1 second.	LEDs 3 and 4 light (red).
4.	Release buttons 7 and 8.	LEDs 3 and 4 go out. The top LED flashes (green).

Stop transmitter		
1.	Press the stop button	<b>NOTE!</b> When the transmitter is active and the stop button is pressed, all relays go off.

For further technical documentation see downloadable .PDF at  
<http://www.tele-radio.com/download/> click Panther, select language and  
select corresponding manual for products in this Quick guide




Receiver (PNS-R1521) - Overview

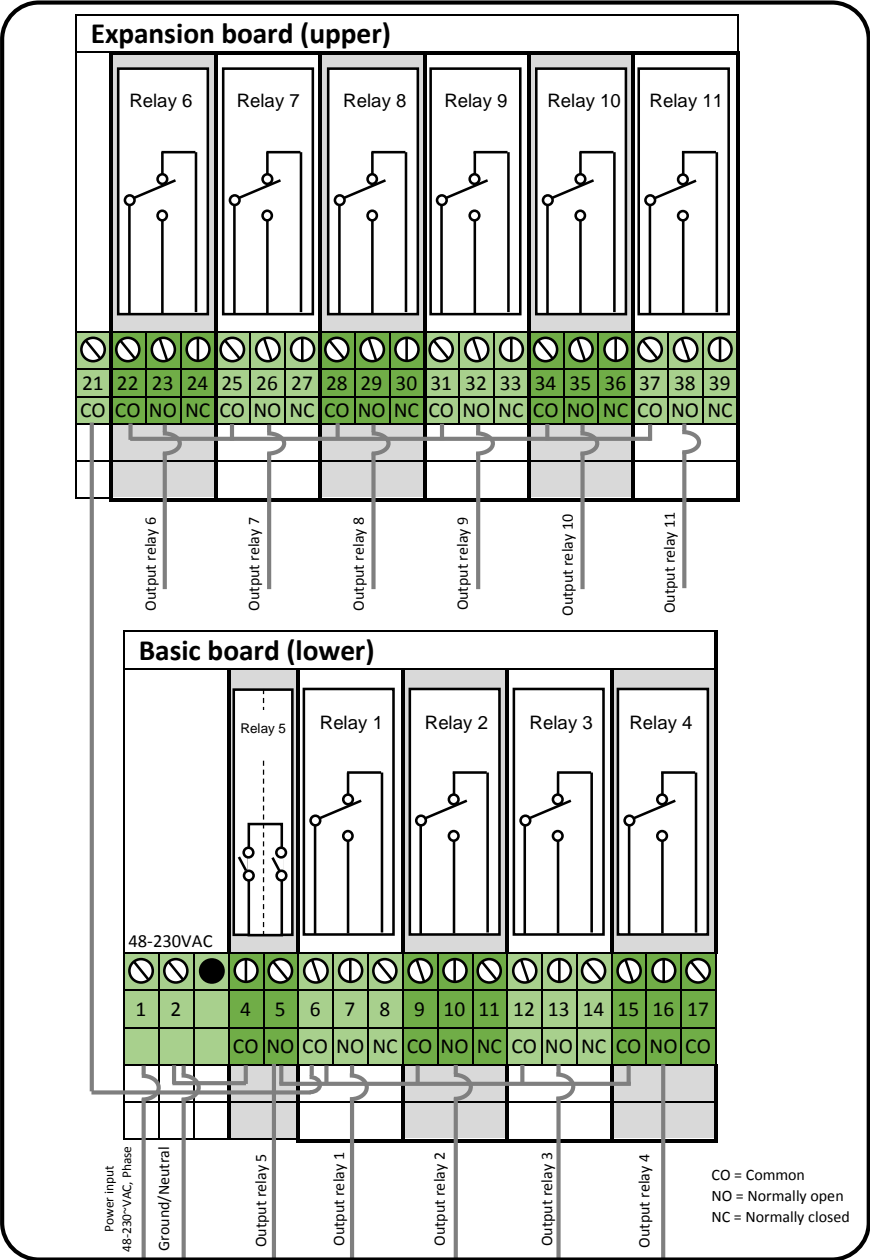

**Note!**  
Only permit licensed or qualified personnel to install the product

Receiver (PNS-R1521) – Outgoing cable

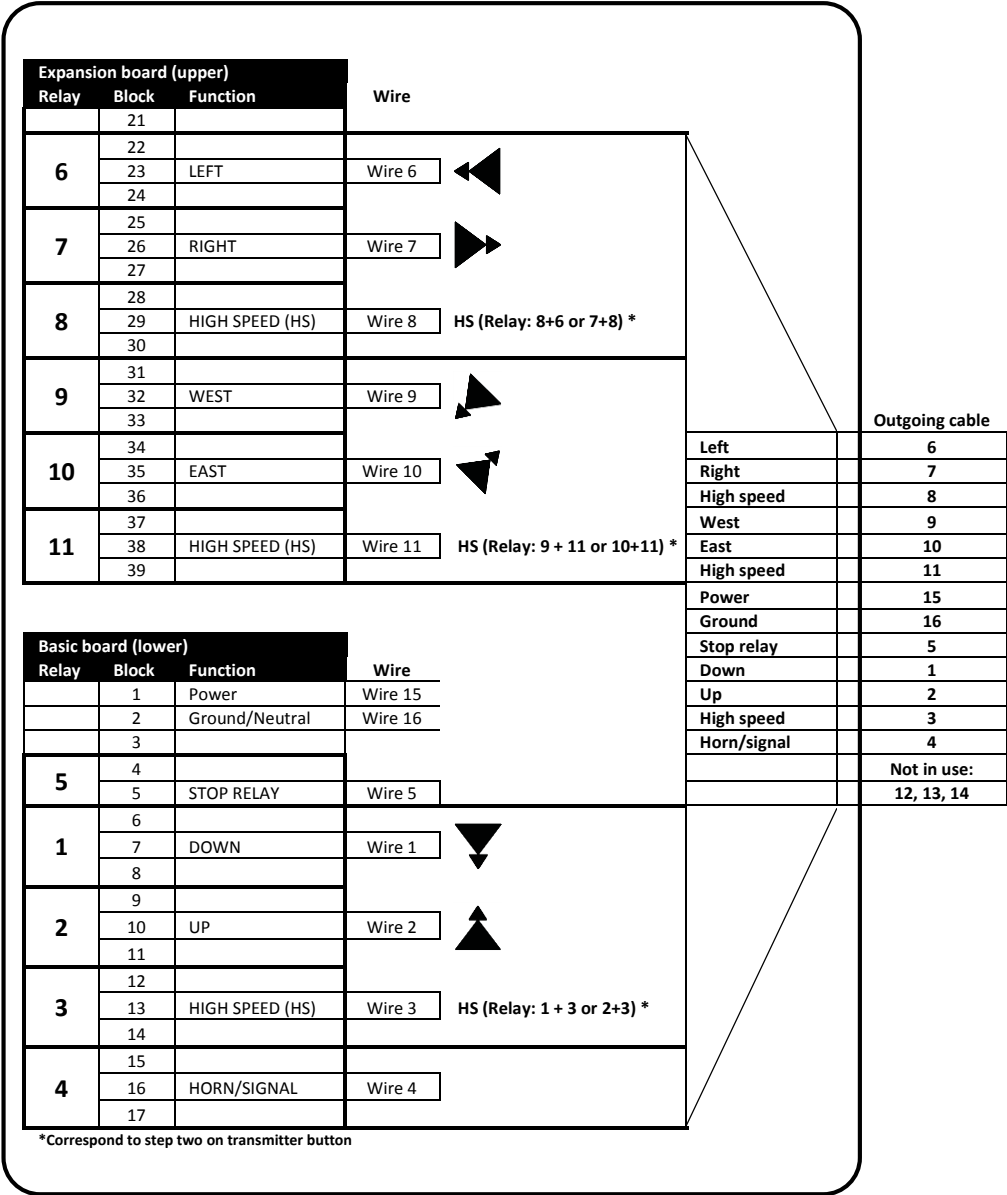

**Note!**  
Only permit licensed or qualified personnel to install the product